

 
Optional items (available at extra cost)

Input cable


For PCD-300A

Cable for connecting NDIS-conductor-equipped strain gage type transducers or bridge box


N-70

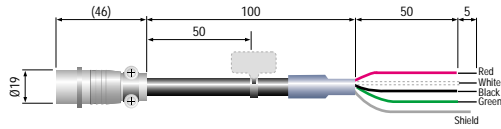

U-17 to 20

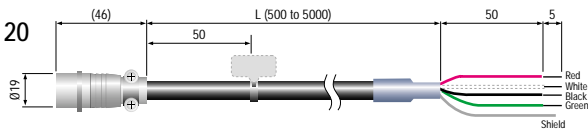


● Connecting sensors and strain gages to the sensor interface
Connect strain gage type transducers or strain gage to the input terminal at the rear. Up to four sensors can be connected to one interface unit.

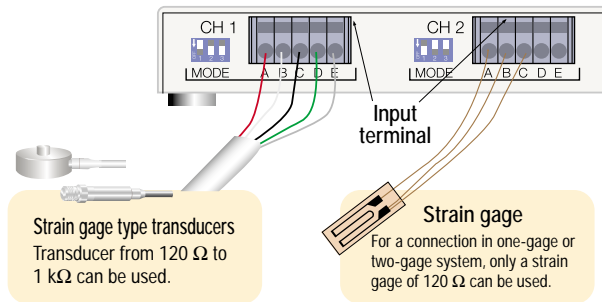


For PCD-320A

BNC cable for connecting signal type transducers or voltage output sensor U-59

U-58

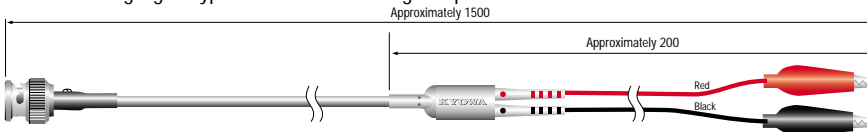


U-59

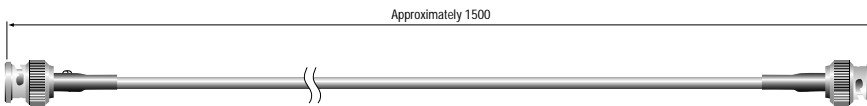

Synchronous cable

N-90

A noise-proof synchronous cable used to connect multiple PCD-300A or 320A units when they are used concurrently.

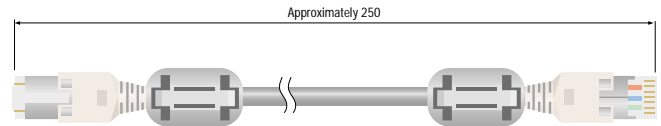

USB cable

N-38, N-39

A noise-proof USB cable used to connect the USB HUB and PC, when multiple PCD-300A or 320A units are used concurrently. One N-38 cable is supplied as a standard accessory.

